

WORKIN
COLORS

INDEX

07
RATIONALITY
➤➤➤➤➤




Tra il bianco e il nero, il **grigio** è considerato il colore della **perfetta neutralità**, per questo è associato a significati come **oggettività, equilibrio, razionalità**. È un colore **moderno**, molto legato al **design**, che richiama il **mondo industriale e quello dei metalli** e in particolare, nelle sue tonalità più scure, del **ferro**. E proprio ai professionisti che lavorano questo tipo di materiali, come i **fabbri**, è dedicata in primis questa collezione Workincolors, che comprende anche **guanti e accessori di specifica protezione**.

In-between white and black, **grey** is considered the **perfectly neutral** colour, this is why it is associated with the meaning of **impartiality, balance, rationality**. It is a **modern** colour, greatly connected with the field of **design**, which calls to mind **the world of industry and of metals** and in particular, in its deeper shades, of **iron**. And it is precisely to the professionals who work with these materials, such as **blacksmiths**, that this Workincolors collection is dedicated to first of all, and that it includes **specific protection gloves and accessories**.





Corporate, Worker Tech, Get Force Mid Ld, Danger H3

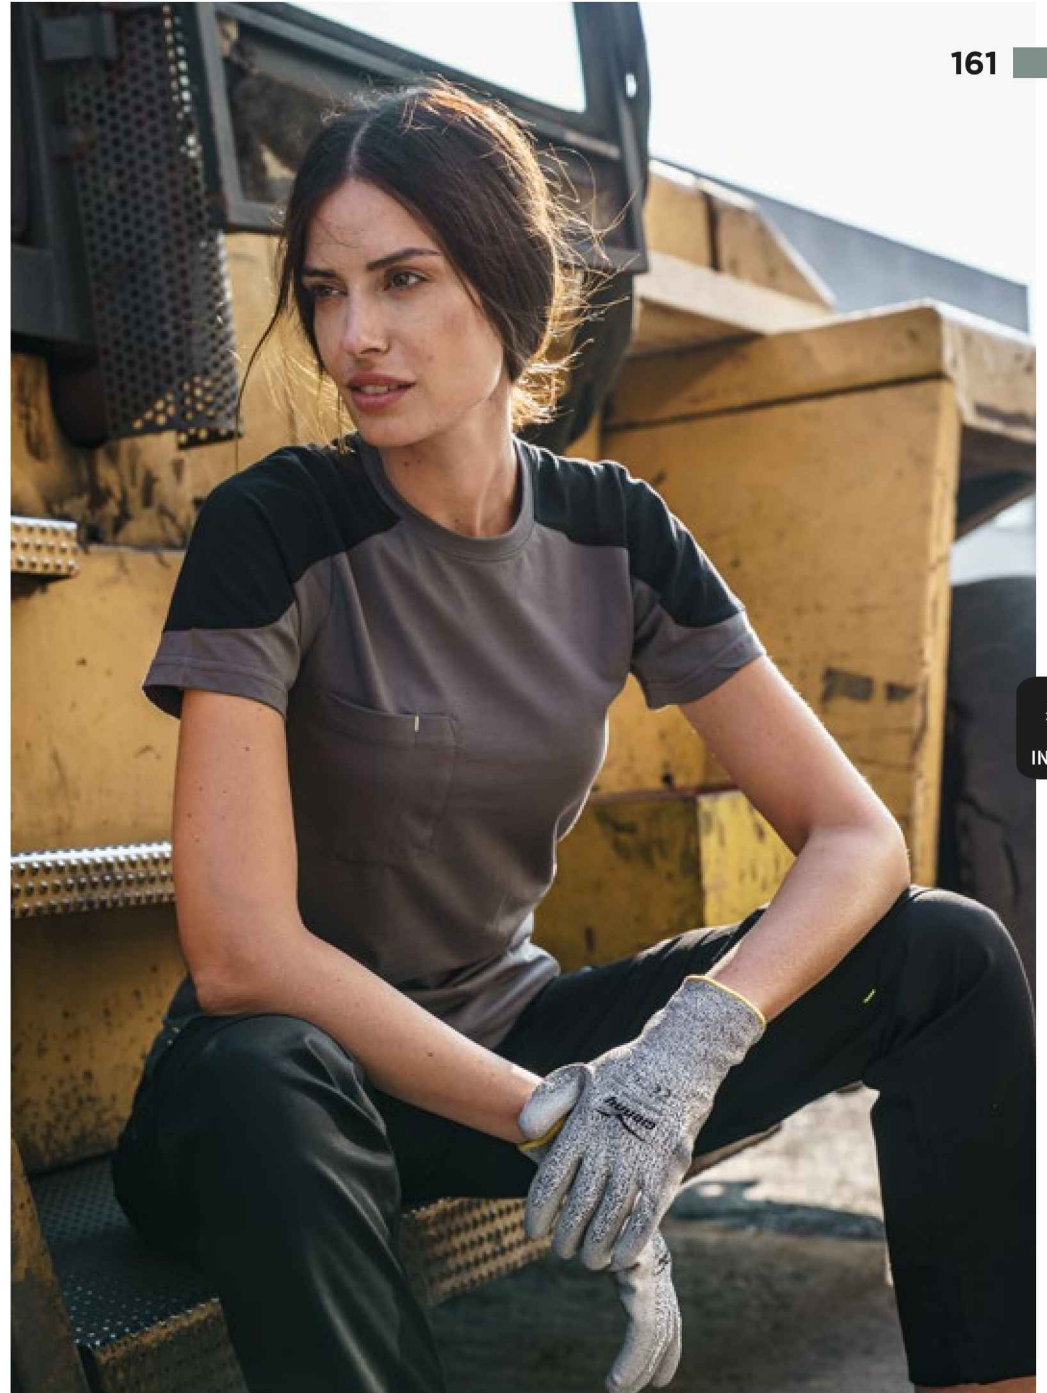

Corporate, Worker Tech, Danger H3







Performer 2.0, Worker Tech, Get Force Mid, Danger H3



Performer 2.0, Corporate, Worker Tech, Danger H3

W0701



Danger H
S00092-0175

Corporate
001464-0438

Worker
000928-0331

Get Force Mid
001445-0437



Performer 2.0
001473-0053

W0702



Danger H3
S00091-0175

Corporate
001464-0438

Worker
000928-0331

Get Force Mid Ld
001506-0414




Performer 2.0
001473-0053




INDEX



Austin, Company, Worker Tech, Worker, Get Force Mid, Danger H3

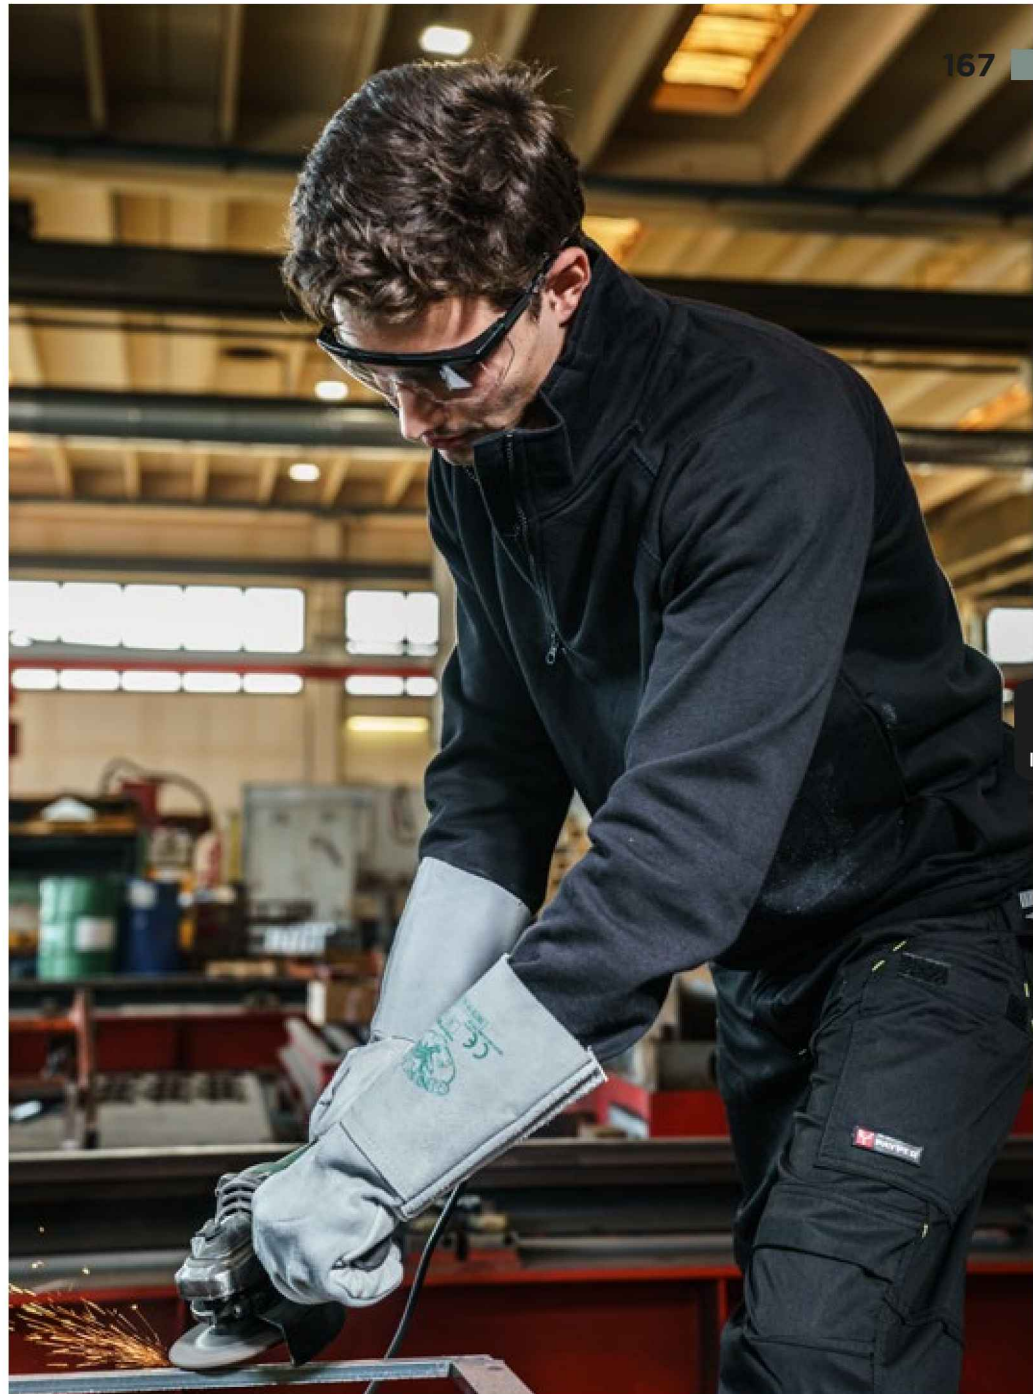

Austin, Worker Tech, 50/70-14

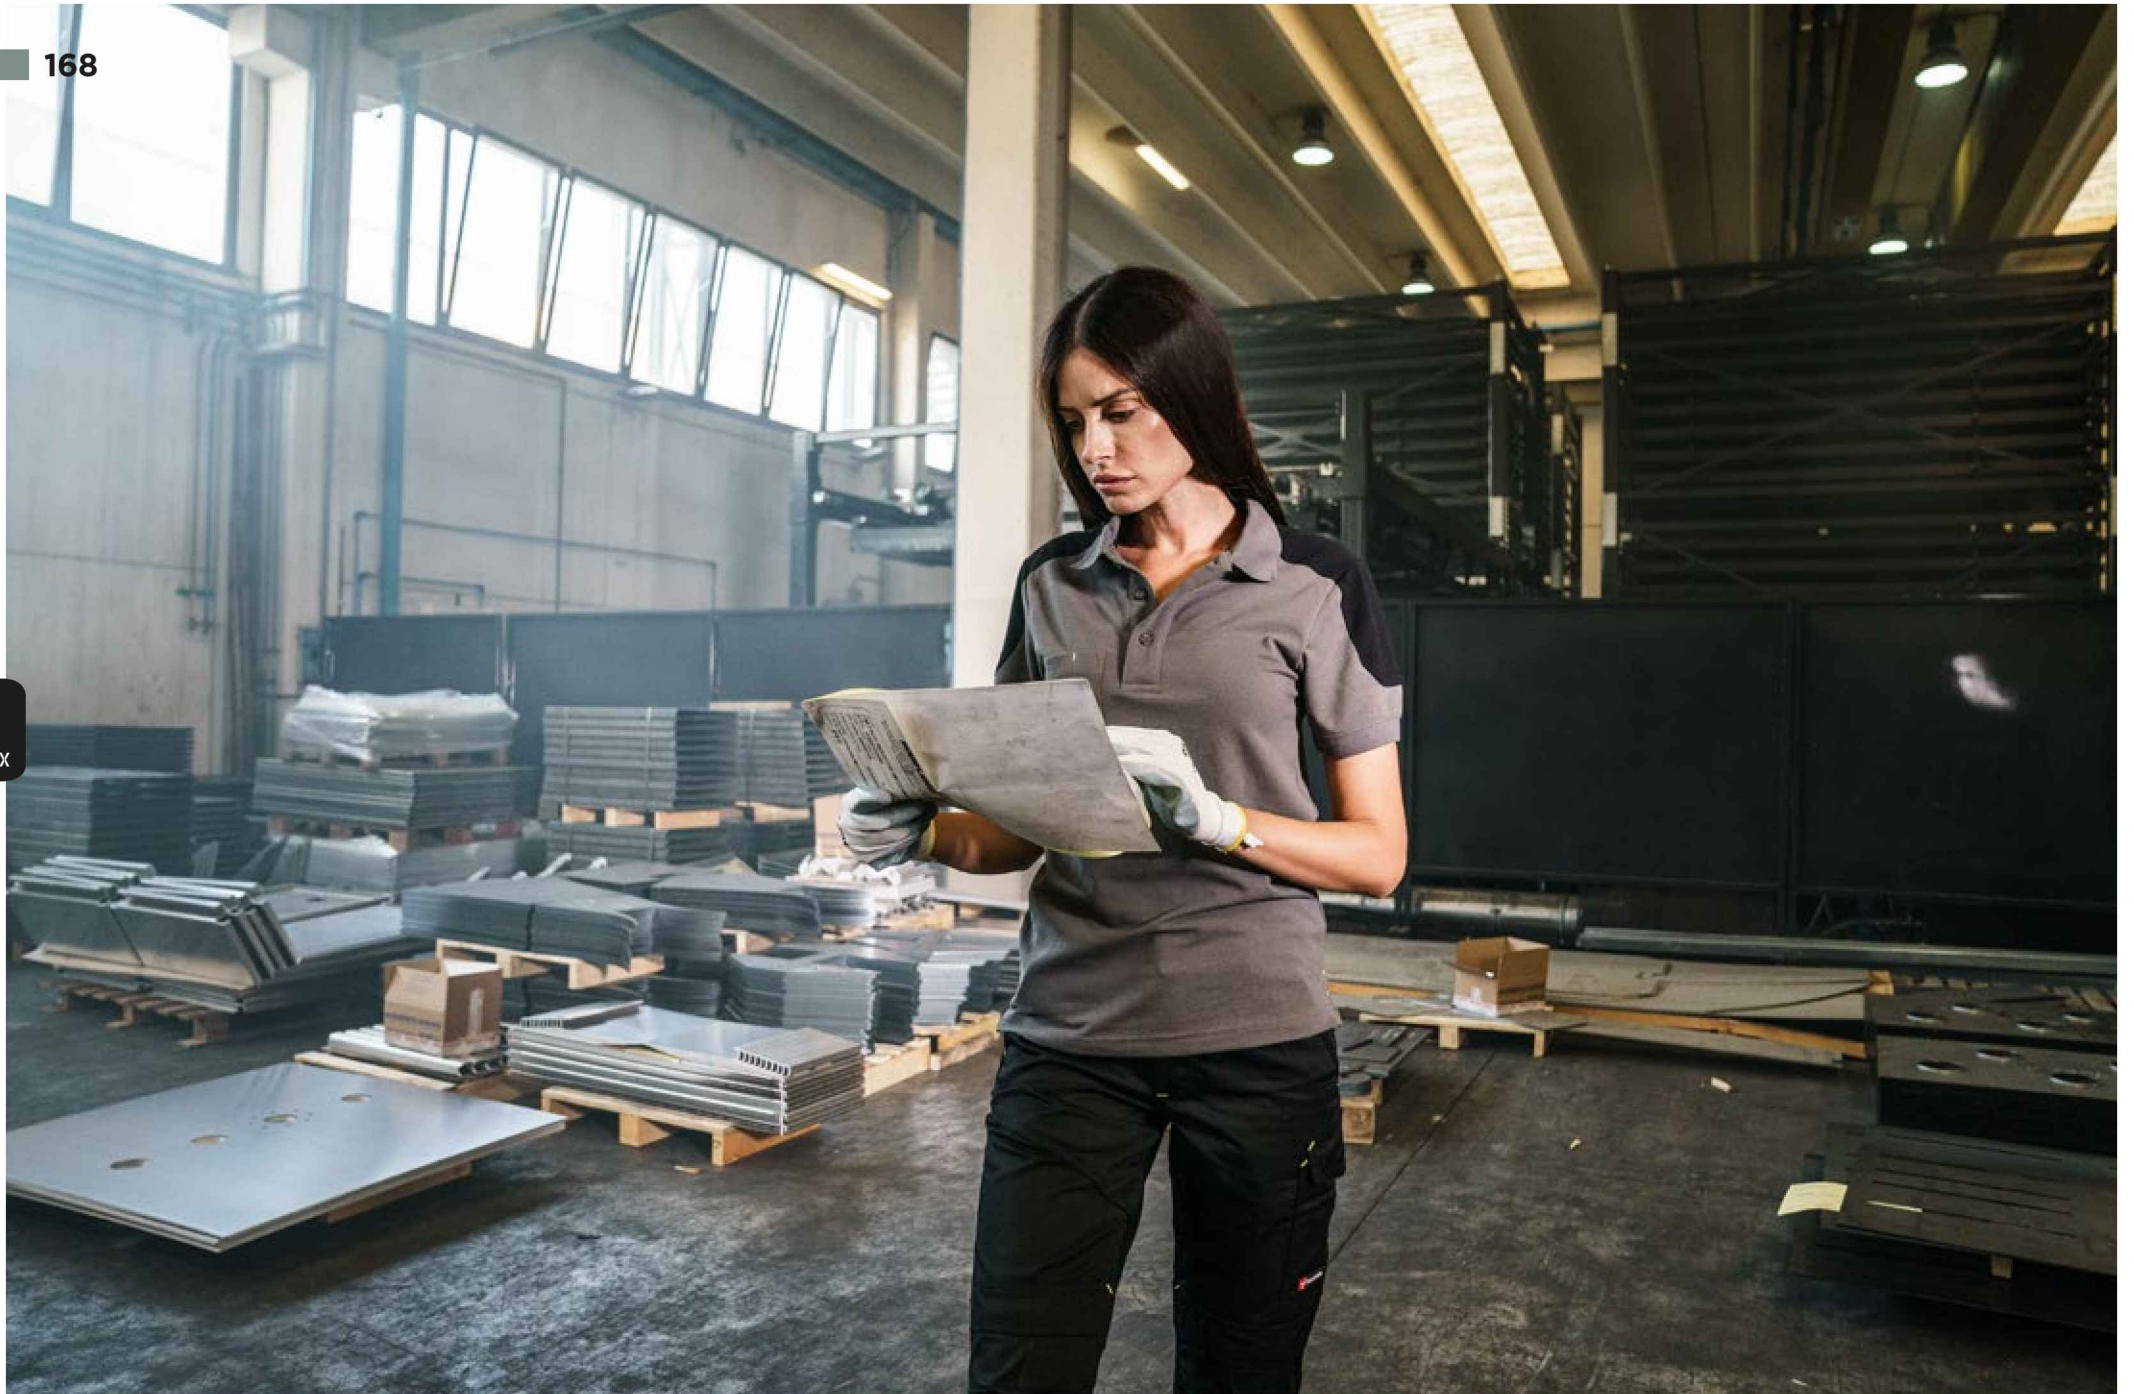



170

W0703



Company
001465-0440

250T-15
000513-0160

Worker Tech
001405-0406

Get Force Low
001467-0414



Austin
001380-0412



W0704



Danger H3
S00091-0175

Company
001465-0440

Worker Tech
001405-0406

Get Force Low Ld
001507-0414

171



Mistral+
000004-0001





W0705



Tank NBR2
S00098-0155

Sunset
000101-0030

Worker
000928-0331

Get Force Mid
001445-0437



Gale
001044-0355

W0706



Sunset Lady
000466-0030

Worker Tech
001405-0406

Get Force Low Ld
001507-0414

175



Gale Lady
001045-0355






»»»» Fighter 2.0, Azua 2.0, Austin, Sunset, Worker Tech, Worker, Get Force Low



»»»» Fighter 2.0, Sunset, Worker



Shell, Specialist, Venice, Power, Get Force Mid, Fire 307R, 50/70-14, 303, 301R

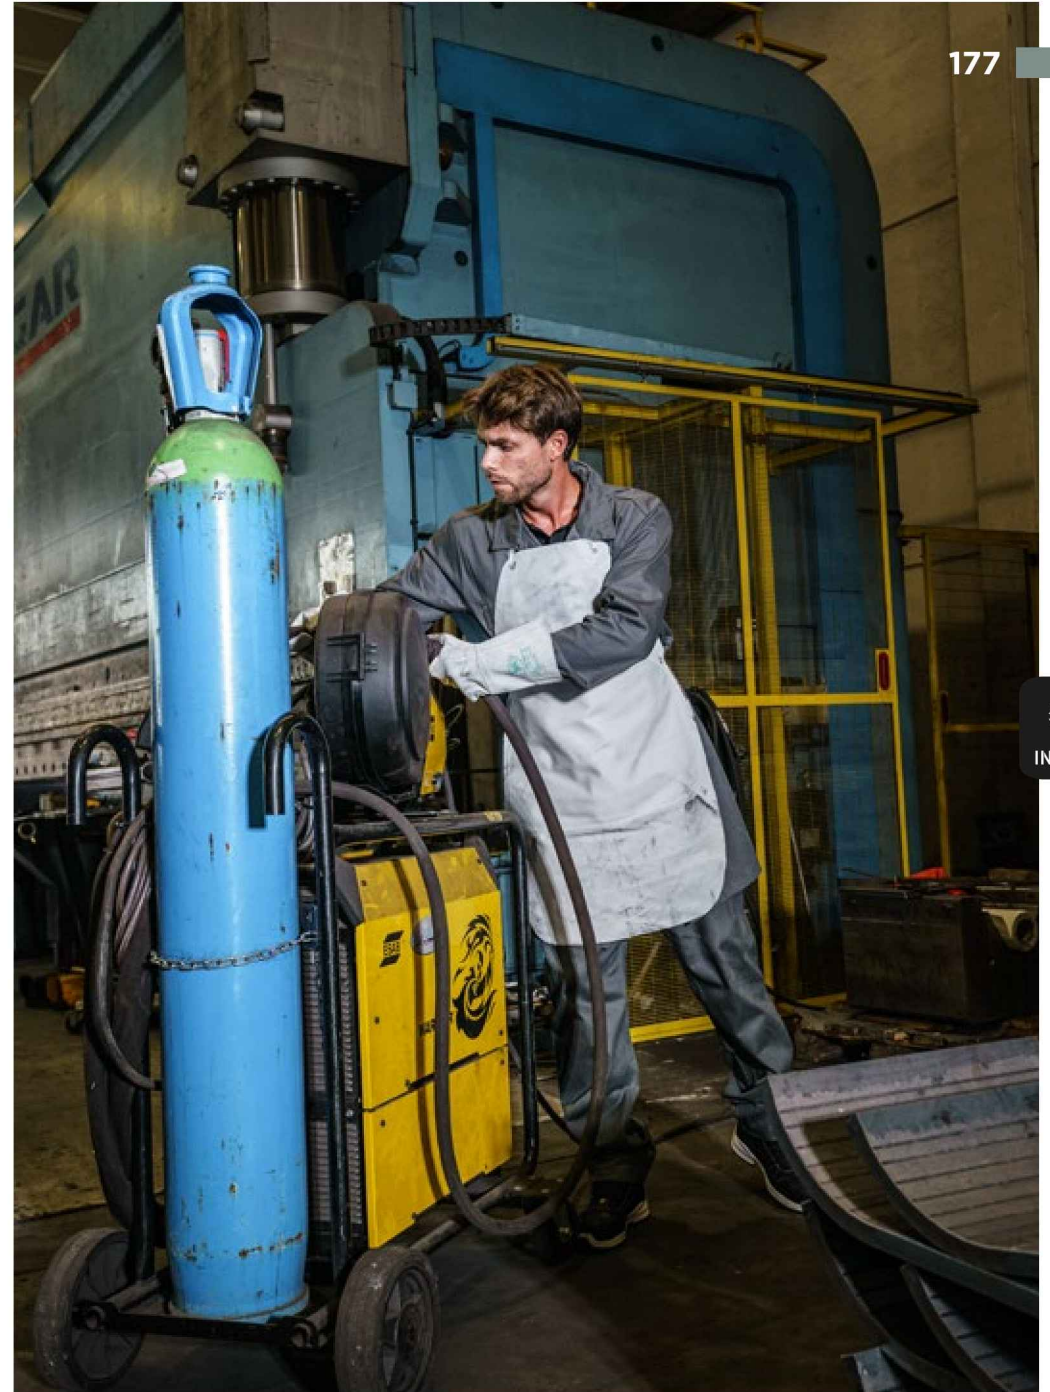

Shell, Venice, Power, Get Force Mid, 50/70-14, 301R

W0707



Austin
001380-0412

Worker Tech
001405-0406

Get Force Low
001467-0414



Azua 2.0
001032-0050

W0708



Mistral+
000004-0001
Worker Tech
001405-0406
Get Force Mid
001445-0437



Fighter 2.0
001012-0051

W0709



Fire 307R
000508-0160

Specialist
001107-0366

Wing
001264-0331

Power
001261-0331

Get Force Low
001467-0414



303
000560-0152

W0710



Venice
000907-0305

Shell
001266-0331

Power
001261-0331

Get Force Mid
001445-0437



301R
000562-0149

250T-15
000513-0160